

Cuisinart®

INSTRUCTION BOOKLET

Recipe
Booklet
Reverse Side



4-Slice Belgian Waffle Maker

WAF-100A Series

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IB-10/219

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles and dials.
3. To protect against fire, electrical shock, and injury to persons, **DO NOT IMMERSER CORD, PLUG, OR UNIT** in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest Cuisinart® Authorized Service Facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electrical shock, or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Always unplug the unit when finished baking waffles.
13. To safely disconnect power at any time, remove the plug from the outlet.
14. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
15. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety.

16. Children should be supervised to make sure they do not treat the unit like a toy.
17. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL. NO USER SERVICEABLE PARTS ARE INSIDE.**

CONTENTS

Important Safeguards	2
Parts and Features	3
Before First Use	3
Operating Instructions	4
Cleaning and Care	4
Storage	4
Warranty	5

PARTS AND FEATURES

 
1. **Housing** – Elegant brushed stainless steel with embossed Cuisinart® logo.
2. **Lid Handle** – Durable, easy-lift handle.
3. **Baking Plates** – Die-cast aluminum plates bake four deep-pocket Belgian waffles.
4. **Temperature Slide Control** – five adjustable browning settings.
5. **Indicator Lights** – Red indicator light signals power ON; green indicator light signals when waffle maker is ready to bake and when waffles are cooked and ready to eat.
6. **Audible Signal (not shown)** – Signals when waffle maker is ready to bake and when waffles are cooked and ready to eat.
7. **Cord Storage (not shown)** – Cord wraps around the back of the unit, and unit stands on back end for storing (see page 4).
8. **Rubber Feet** – Feet keep unit steady and won't mark countertop.
9. **Locking Lid** – For upright storage.

BEFORE THE FIRST USE

Remove all packaging and any promotional labels or stickers from your waffle maker. Be sure that all parts (listed above, **Parts and Features**) of your new waffle maker have been included before discarding any packaging materials. You may want to keep the box and packing materials for use at a later date.

Before using your Cuisinart® 4-Slice Belgian Waffle Maker for the first time, wipe housing and baking plates with a damp cloth to remove any dust from the warehouse or shipping.


Note: The Cuisinart® 4-Slice Belgian Waffle Maker has been treated with a special nonstick coating. Before the first use, we suggest you season the grids with cooking spray or flavorless vegetable oil. If using oil, apply oil with a paper towel or pastry brush. You may find it helpful to repeat this process before each use of the waffle maker.

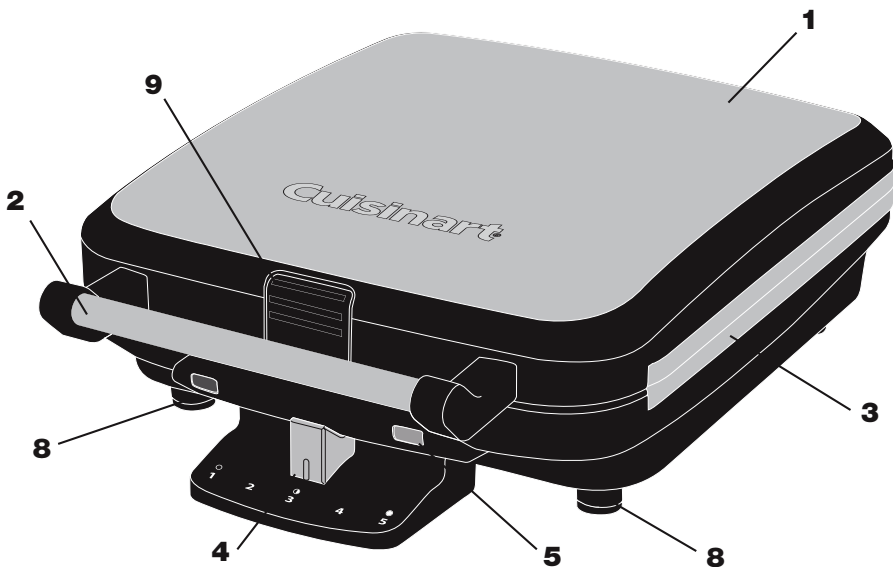

OPERATING INSTRUCTIONS


1. Place the closed waffle maker on a clean, flat surface where you intend to use it.
2. Plug the power cord into a standard electrical outlet.
3. Move the temperature slide control to the desired browning setting – setting #1 for the lightest color waffles and setting #5 for the darkest color waffles.

 The red indicator light will turn on to signal that the power is on. Allow the waffle maker to heat up. When the waffle maker has reached desired temperature, the green indicator light will turn on and the audible tone will sound. You are now ready to begin.

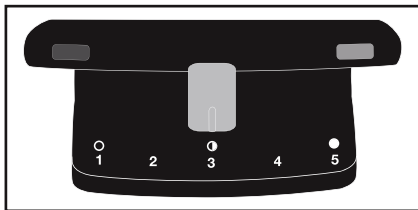

Note: The first time you use your waffle maker it may have a slight odor and may smoke a bit. This is normal, and common to appliances with a nonstick surface.

 4. Lift lid of waffle maker by grasping the handle and pushing up in one fluid motion. Lid will stay open at a 105° position until you lower it.

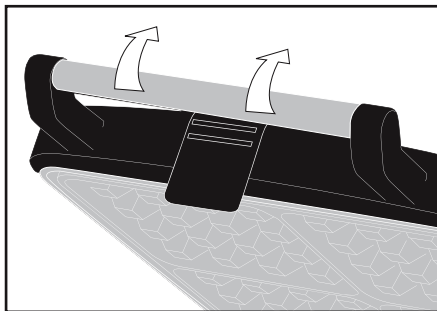

5. Pour batter onto the center of the lower waffle grid. Use a heat-proof spatula to spread batter evenly over the grid. Close

the lid. The green light will turn off but the red light will stay illuminated.

6. Baking time is determined by the browning level that you chose in Step 3. It may take up to 6 minutes to bake your waffles on setting #5.
7. When the waffles are ready, the green light will turn on and the audible tone will sound. Remove the waffles by gently loosening the edges with a heat-proof plastic spatula or wooden spatula. Never use metal utensils, as they will damage the nonstick coating.
8. When you are finished baking, unplug the power cord from the wall outlet. Allow the waffle maker to cool down completely before handling.

CLEANING AND CARE

Once you have finished baking, remove plug from electrical outlet. Leave lid open so grids begin to cool. Allow waffle maker to cool down completely before handling.

 
Never take your waffle maker apart for cleaning. Simply brush crumbs from grooves, and absorb any excess cooking oil by wiping with a dry cloth or paper towel.

You may also clean the grids by wiping with a damp cloth to prevent staining and sticking from batter or oil buildup. **Be certain grids have cooled completely before cleaning.** If batter adheres to plates, simply pour a little cooking oil onto the baked batter and let stand approximately 5 minutes, allowing it to soften for easy removal.

To clean exterior, wipe with a soft dry cloth. Never use an abrasive cleanser or harsh pad. **NEVER IMMERSE CORD, PLUG OR UNIT IN WATER OR OTHER LIQUID.**

STORAGE/ LOCKING LID

Store with cord wrapped securely under base. For compact storage, stand waffle maker on back end with control panel facing up. The waffle maker has been designed with a special latching feature so the lid stays closed during storage.

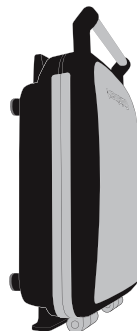

WARRANTY

Limited Three-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® 4-Slice Belgian Waffle Maker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® 4-Slice Belgian Waffle Maker will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We suggest you complete and return the enclosed product registration card promptly to facilitate verification of the date of original purchase. However, return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® 4-Slice Belgian Waffle Maker should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please register your warranty online at

www.cuisinart.com.au

or

Call toll-free

1800 808 971 (AUST), 0800 435 000 (NZ),

or

Write to

Cuisinart Australia

24 Salisbury Road

Asquith NSW 2077

or

Cuisinart New Zealand

44 Apollo Drive Mairangi Bay

Auckland New Zealand

This warranty expressly excludes any defects or damages caused by accessories, replacement parts, or repair service other than those that have been authorised by Cuisinart.

This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

©2010 Conair Corporation

Cuisinart® is a registered trademark of the Conair Corporation

Cuisinart

150 Milford Road

East Windsor, NJ 0850

Cuisinart Australia

24 Salisbury Road

Asquith NSW 2077

Cuisinart New Zealand

44 Apollo Drive

Mairangi Bay, Auckland

Printed in China