

Cuisinart®

INSTRUCTION
BOOKLET



Cordless Electric Kettle

CJK-15A Series

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.**
3. Do not touch hot surfaces. Use handle.
4. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return appliance to the nearest Cuisinart Authorised Service Facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always put kettle on base, then plug cord into wall outlet. To disconnect, push button to Off, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Scalding may occur if the lid is removed during the heating cycle.
14. Lock lid securely onto kettle before serving any beverages.
15. The kettle is designed for use only with the power base provided. It must never be used on a range top.

16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and others working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Note: This appliance is only for 220-240V.

- To prevent any electric risk, please use under 220-240V only.
- Do not plug-in if the cord and plug do not fit properly.
- Please follow the safety guidelines in this instruction booklet.

TABLE OF CONTENTS

Important Safeguards 2
Unpacking Instructions 3
Introduction 3
Features and Benefits 3
Operation..... 4
Helpful Hints..... 4
Cleaning and Maintenance 5
Warranty 5

UNPACKING INSTRUCTIONS

1. Place the box on a large, sturdy, flat surface.
2. Remove the instruction booklet and any other literature and the upper insert.
3. Lift the kettle from the box and remove the polybag.
4. Lift the power base from the box and remove the polybag.

We suggest you save all packing materials in the event that future shipping of the machine is needed. Keep all plastic bags away from children.

INTRODUCTION

Your new Cuisinart® Cordless Electric Kettle features the latest technology to make boiling water quicker and easier than ever. The elegant double-wall kettle makes it the perfect addition to any table.

This kettle is exceptionally simple to operate, but as with every new product, we suggest you read the following information carefully to familiarise yourself with the Kettle's use and care.

FEATURES AND BENEFITS

1. **Double-wall Construction with 1.5L Capacity**
2. **Water Window with Water Level Markings**
3. **User-friendly Spout**
(with Spout Filter)
4. **Stay-Cool Handle**
(Ergonomically shaped for comfort.)
5. **Lid with Release Button**
(For quick and easy filling)
6. **Power “On/Off” Switch**
(Simply lift down until “click” is heard to begin the boiling process. Kettle shuts off automatically once water has boiled.)
7. **“ON” Indicator Light**
(Illuminates when kettle is on.)
8. **Power Base**
(Supplies power to kettle)
9. **Cord Wrap (under base)**
(Unwind only as much as you need. Provides convenient storage.)



BEFORE USING FOR THE FIRST TIME

Before using your Cuisinart® Cordless Electric Kettle for the first time, we recommend rinsing the kettle with water to remove any dust or residue remaining from the manufacturing process.

OPERATION

1. Open the Lid.

Push the release button on the handle and the lid opens. (See Fig. 1.)

2. Fill the Kettle.

Fill the kettle with as much fresh, cold water as you will need. The maximum water level is indicated near the handle and is marked by the word “MAX”. (See Fig. 2.) Please understand that if the kettle is overfilled, it may overflow during the boiling.

3. Close the Lid.

Position kettle with spout facing away from you. Press gently toward you to close.

4. Place Kettle on Power Base.

Place the kettle on the power base so the element on the bottom of the kettle sits securely on the power base.

5. Power “ON”.

Activate the power “ON” switch by gently lifting DOWN until a “click” is heard (See Fig. 3.) When the water has boiled, the kettle will automatically switch “OFF”.

NOTE: The kettle can be switched off at any time before the water boils, simply by lifting the kettle off the base.

6. Pour and Serve.

Pour water out slowly. Return kettle to base after pouring. If you wish to reboil the water, you must lift DOWN the power “ON” button again.

HELPFUL HINTS

- Always use fresh water in the kettle.
- If the kettle is accidentally switched on without a sufficient water level, a boil-dry safety mechanism will automatically switch the kettle off.
- The lid should always be securely in place while heating water.



Figure 1



Figure 2



Figure 3

CLEANING AND MAINTENANCE

- The kettle should always be emptied before cleaning and storage.
- Unplug your kettle and allow it to cool completely.
- Wipe the kettle and base with a soft, damp cloth.
- The filter can be removed by grasping it and pulling upward. Run under hot water and rub with a clean cloth or brush. Replace the filter; it will snap back in place.
- Do not use abrasive cleansers or scouring agents of any kind on the interior or exterior of the kettle.
- **Never immerse kettle or power base in water.**

Maintenance: Any other servicing should be performed by an Authorised service representative.

DECALCIFICATION

Decalcification refers to removing mineral deposits, which may form in the interior of the kettle and may result in discoloration.

To get the best performance from your kettle, decalcify it from time to time. Frequency will depend on the hardness of your water and how often you use the unit.

We suggest using a kettle descaler in order to dissolve these deposits or scale. Follow the directions on the descaler package.

Alternatively, fill the kettle with enough white vinegar to cover the bottom by about 1cm. Heat the vinegar to a boil. Repeat this with cooled vinegar until all deposits are removed. When complete, empty the kettle and rinse with clean water.

LIMITED 3 YEAR WARRANTY

This Cuisinart® appliance has a limited warranty for domestic consumer use for 3 years.

The warranty covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unAuthorised persons.

If the appliance does not perform satisfactorily

due to defects of material or manufacture, please contact local distributor for maintenance service.

This warranty is available to consumers only. You are a consumer if you own a Cuisinart Cordless Electric Kettle that was purchased at retail for personal, family or household use.

We warrant that your Cuisinart Cordless Electric Kettle will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase. Consumer must maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart Cordless Electric Kettle should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1800 808 971 (AUST), 0800 435 000 (NZ), for additional information from our Consumer Service Representatives.

NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Cuisinart Service Centre at 1800 808 971 (AUST), 0800 435 000 (NZ), before returning the product for service. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart Cordless Electric Kettle has been manufactured to the strictest specifications. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages.

Cuisinart®

The Most Trusted Name in the Kitchen™



Grills &
Griddlers



Food
Processors



Toaster Ovens



Blenders



Hand
Blender

Cuisinart® offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savor the Good Life.

www.cuisinart.com.au

©2016 Cuisinart
Cuisinart® is a registered trademark of Cuisinart,
East Windsor, NJ 08520
1-800-726-0190

Cuisinart Australia
24 Salisbury Road
Asquith, NSW 2077

Cuisinart New Zealand
44 Apollo Drive
Mairangi Bay, Auckland, New Zealand

Printed in China

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

IB-16/244