

Cuisinart®




Instruction & Recipe Booklet PerfectTemp Preprogrammed Kettle - CPK-17 Series

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

When using any electrical appliance, especially when children are present, **basic safety precautions should always be taken to reduce the risk of fire, electric shock and/or injury**, including the following:

- Never leave unattended while cooking to avoid possibility of fire.
- This appliance is intended for **HOUSEHOLD USE ONLY** and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - clients in hotels, motels and other residential type environments;
 - bed and breakfast settings
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack experience and knowledge unless, they have been given instruction concerning use of the appliance by a person responsible for their safety.
- To ensure no possible accidental injury occurs, when infirmed persons (including children) are near the appliance, they must be closely supervised.
- Use only on an appropriate benchtop and indoors only, sitting away from flammable materials such as curtains, draperies and walls of similar nature as a fire may occur if comes in contact or becomes covered during operation.
- **CAUTION:** Do not operate the kettle on an inclined plane nor move the kettle while the kettle is switched on.
- Do not place on or near a hot gas, electric burner, or in a heated oven.
- Do not use appliance for other than its intended use.
- This appliance is under 220V~240V use only. Check voltage to be sure the voltage indicated on the nameplate agrees with your voltage.
- To avoid the possibility of the unit being accidentally pulled off the working area, which could result in damage to the unit or personal injury, do not let the cord hang over the edge of a table or benchtop.
- To avoid damage to the cord and possible fire or electrocution hazard, do not let cord come into contact with any hot surfaces including a stovetop.
- Do not operate the kettle unless the element is fully immersed.
- Do not operate this appliance in an appliance cabinet or under a wall cabinet. When storing in an appliance cabinet, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the unit is in contact with the walls of any cabinetry or on closing the cabinet door and touching the unit.
- Always unplug from the electrical outlet when not in use before putting on or taking off parts and before cleaning.
- At no time, before or during boiling and cleaning immerse unit, plug or cord in water, or any other liquids similarly under running water too – this is to protect against the starting of a fire and electric shock that could induce injury to persons. If the unit, plug or cord should fall into water or other liquids, unplug the cord from the electrical output immediately. **DO NOT** reach into the water.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning; use a soft cloth with mild detergent.
- The temperature of accessible surfaces may be high when the appliance is operating.
-  Surfaces marked with this symbol will be very hot to touch during use – only use handles and/or knobs. **DO NOT TOUCH** until the unit has cooled down.
- Scalding may occur if the lid is removed during the heating cycle.

SPECIAL CORDSET INSTRUCTIONS

- A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over unintentionally or pulled on by children.

SAVE THESE INSTRUCTIONS

BEFORE THE FIRST USE

Before using your PerfectTemp Preprogrammed Kettle for the first time, remove any dust from shipping by wiping the unit, dial and baking plates with a damp cloth (see Cleaning & Maintenance Instructions on page 6).

ENSURE THE EXTERIOR WALLS OF YOUR PerfectTemp Preprogrammed Kettle IS NOT WITHIN 15CM CONTACT OF ANY OTHER PARAPHENALIA & is sitting back at least 15cm from the edge of the benchtop or table.

CONTENTS

Important Safeguards	2
Special Cordset	3
Before the first Use	3
Parts & Features	4
Quick Tips Guide	5
Controls & Functions	5
Operating Instructions	6
Cleaning & Maintenance	6

PARTS & FEATURES



A. Removable Scale Filter

To filter tap water.

B. Dripless Pour Spout with Splash Guard

Helps benchtops stay dry.

C. Easy-Open Lid

Easy & efficient filling.

D. Lid-Release Button

E. Preset Temperature Controls with LED

- Delicate Tea (75°C)
- Green Tea (80°C)
- Oolong Tea (85°C)
- White Tea (90°C)
- French Press (95°C)
- Black Tea (Boil -100°C)

F. Start/Stop with LED

Start & stop the heating process.

G. Keep Warm with LED

Maintains the selected temperature for 30min.

H. Water Window

Transparent view of water level.

I. Stay-Cool Handle

Ergonomic & comfortable.

J. Power Base with 360° Swivel

Left or right-handed accessible. Cordless convenience.

K. BPA Free (not shown)

All materials that come in contact with water are BPA free.

QUICK TIPS GUIDE

Type	Temperature	Steep Time
Delicate Tea	75°C	1–2 min
Green Tea	80°C	2–3 min
White Tea	85°C	2–3 min
Oolong Tea	90°C	3–4 min
French Press	95°C	4–5 min
Black & Herbal Teas	100°C (full boil)	3–5 min

CONTROLS & FUNCTIONS

Memory Feature	<p>The kettle features an internal “memory” that lets you leave the kettle off the base for up to 2 minutes without it going into standby mode. When returned to the base, it will restart the heating &/or Keep Warm cycles right where they left off.</p> <p>NB: If kettle goes into standby mode before it’s returned to base, simply reselect your preset temperature & press Start to restart.</p>
Keep Warm Mode	<p>Keep Warm is the kettle’s default function that automatically maintains the selected temperature for 30 minutes. When you select one of the presets, your kettle will hold a temperature just below that particular boiling point during the Keep Warm cycle. To bring water back to a rolling boil, press the Start button twice.</p>
	<p>Keep Warm can be turned off by pressing the Keep Warm button at any time before or during the heating cycle. To turn it back on, just press the button again. If Keep Warm is not selected when the kettle reaches the preset temperature the unit will beep & the Start light will turn off. The preset temperature light will remain lit until water temperature has dropped below the preset.</p>
Boil-Dry Protection	<p>Your kettle is equipped with boil-dry protection. If it starts heating without enough water in the kettle, the heater will automatically shut off to avoid damaging the heating element. The lights will flash & the unit will beep to alert you. Once the kettle has cooled down, lift it off the base then replace it to reset & the heating cycle will restart.</p>
	<p>The quickest way to cool down the heater is to fill the kettle with cold water; however, you can also wait for it to cool down by itself.</p>
Sleep Mode	<p>If the unit is not in use for 5 minutes, it will revert to sleep mode. The heater & all lights will be off, but your last selections will remain in the unit’s memory. To turn the kettle back on, simply press any button, or lift it up then return it to the base.</p>

OPERATING INSTRUCTIONS

1. Open kettle by pressing the Lid Release (OPEN) Button.
2. Add fresh, cold water, watching level in water window. Do not fill past 1.7L mark – overfilling could cause boil-over.
3. Close the lid by pressing down until it locks shut.
4. Make sure the unit is plugged in, then place the kettle on the power base.
5. Press the preset temperature button for the type of tea you are brewing; both preset and Keep Warm buttons will light up.

NOTE: If Keep Warm function has been turned off, only the preset temperature button will light up.

6. Begin the heating process by pressing the Start button. The selected preset will flash until water reaches set temperature. To turn kettle off at any time, simply press the Start (Stop) button again.
7. Once your kettle has reached the selected temperature, the unit will beep. The Keep Warm, preset temperature and Start lights will stay on, and temperature will be maintained for 30 minutes.
8. Lift the kettle off the base to pour water. All lights will turn off while the kettle is off the base.
9. Return kettle to the base. Indicator lights will go back on and the Keep Warm cycle will pick up right where it left off.

CLEANING & MAINTENANCE

- Unplug your kettle and allow it to cool before cleaning.
- Wipe the kettle and base of unit with a soft, damp cloth.
- Be sure that the electric kettle socket is kept dry.
- Dry all parts after every use.
- Never immerse kettle or power base in water.
- Any other servicing should be performed by an authorised service representative.

REMOVABLE SCALE FILTER

- This kettle has a scale filter inside to clean water.
- The filter can be removed by grasping it and pulling upward. Run under hot water and rub with a clean cloth or brush. Replace the filter; it will snap back into place.

DECALCIFICATION

- Decalcification refers to removing mineral deposits, which may form in the interior of the kettle and may result in discolouration.
- To get the best performance from your PerfectTemp Cordless Preprogrammed Kettle, decalcify your unit from time to time. Frequency will depend on the hardness of your tap water and how often you use your kettle.
- We suggest using a kettle descaler in order to dissolve these deposits or scale. Follow the directions on the descaler package.
- If a commercial descaler is not available, fill the kettle with enough white vinegar to cover the bottom by about 1cm. Heat the vinegar to a boil. Repeat this with cooled vinegar until all deposits are removed. When the descaling process is complete, empty the kettle and rinse out several times with clean water.

Cuisinart®

www.cuisinart.com.au

©2020 Cuisinart
Suite 101 Ground Floor
18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Visit our Website:
www.cuisinart.com.au

Printed in China

Trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.

IB-13/256B